


CLOSET AND SHOWER RISER SPACERS

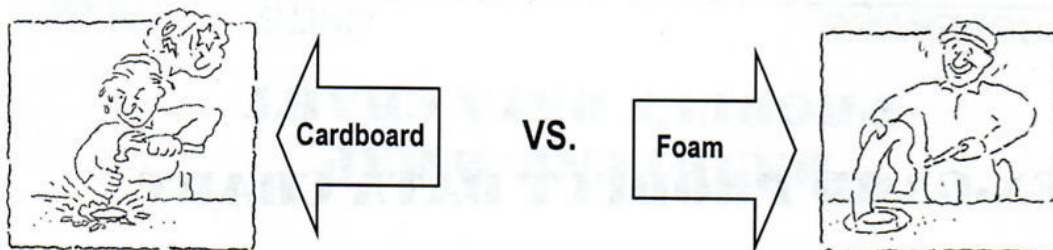


FLEX-GARD is made of foam. It will not stick to cement like cardboard. Spacer removal is fast and easy. Plus, FLEX-GARD cost no more than conventional cardboard spacers.

5 Easy Steps




Insert screwdriver at foam end closest to pipe

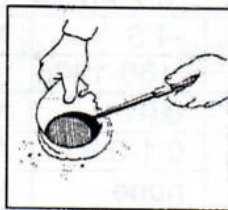

Pry up and grip foam



Pull and unravel

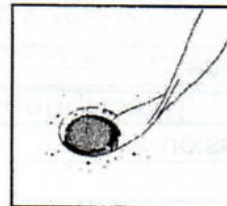

Continue unraveling



A clean, wide space is left for flange

FLEX-GARD